

GUIDELINES TO USE BESTCONTROL HEATERS

01



Please inspect your BestControl device for damages - **DO NOT USE** it if damaged. Make sure that nothing was damaged during transport and the equipment works. In case of damages, contact us through bestcontrolheaters@gmail.com

02



Read the instruction manual.

03



IMPORTANT Verify if there are fire alarm devices in the area of the intervention. In case there are, **these must be deactivated.**

04




Move all furniture - sofas, beds, nightstands, and others - at least 30 centimeters away from the walls in order to allow for good air circulation.

Certify that the device is in a straight and stable position in order to direct the heat to the areas of intervention and to areas that are difficult to reach, like the bed, mattress and bedside tables.

Use the axial ventilators to move hot air.

05

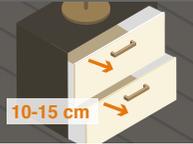

Open all closets and drawers around 10 to 15 cms.

06




Remember that heated air will naturally go up. In order to reduce heat losses, use insulating tape or similar to cover the exhaust fans and any air return from ACs.

07




Isolate the windows and window shutters with thermal isolation materials.

08

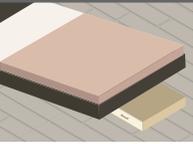

In order to guarantee a good airflow near the floor, support the bed, using a chair or a drawer.

09

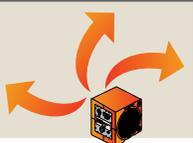

Ensure the right airflow direction (refer to the graphic). Ensure you leave enough space in front and behind the heaters and ventilators.

10



Place the heater and additional ventilators as shown in the diagram to ensure the right airflow. Adjust the position of the heater to maximize the airflow according to the configuration of the room.


11



Always plug the device to 16A 240 watt sockets. Connect the 2 power cables in the heater plugs.

Both plugs must be connected to ensure proper functioning. Refer to the image.

12

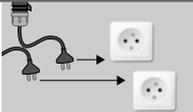

When using wall sockets, ensure that the total energy consumption per circuit does not exceed the circuit breaker capacity of 16 A 240W. If this is the case you must connect the device to another socket.

13



After plugging the power cables and verifying the respective green lights are turned on, turn on the ventilator (GREEN SWITCH).

Then, turn on the heater (ORANGE SWITCH).

14



Your BestControl Heater is equipped with temperature control.

It is predefined for 55° C and you do not need to do any temperature adjustments in order to use the device.

In order to change this configuration, press the "Set" button in the thermostat, and use the arrows to adjust the temperature. Press the "set" button to confirm the desired temperature.

15



Close the room door and let the room heat for at least 15 and up to 18 hours. Ensure all the surfaces' temperatures inside the intervention area are above 48° C.

16

Outside the room, place a towel near the door to reduce any heat escape.

17



The right temperatures are reached from 8 to 12 hours after the device is turned on.

18



Control the temperature, by measuring regularly from the outside, using the measuring device supplied with the equipment.

19



Protect yourself against the extreme heat and use the infra-ray gun available in our shop to monitor the temperature inside the room.

20



After usage, turn off the heater and measure the temperature in the corners of the room.

All surface temperatures inside the intervention area must be above the 48° C.

Measure the temperature in the bed covers and pillows, inside the drawers, around bedside tables, and inside the closets. Measure also underneath the bed near the rug and carpets.

21

Point the ventilators towards colder spots like the door or windows to cool down the room for about 1 hour.

22



Remove all devices from the room and pack your BestControl Heaters device in the storage bag.

Store the device in a dry location at a temperature between 10 and 45° C.

OBSERVATION:

Ensure you disconnect all electrical devices. Do not place electrical devices directly in front of the heater. Ensure all the electrical accessories you are using are adequate to 16A 240W.

ATTENTION

Always turn on the ventilators ahead of turning on the heater. Always turn off the heater first and the ventilators after.

You SHOULD NEVER use the BestControl Heaters device for other purposes than the ones listed above.



best control I--- Heaters

Watch detailed videos for usage instructions and preparation of the intervention area in

www.bestcontrol.org